


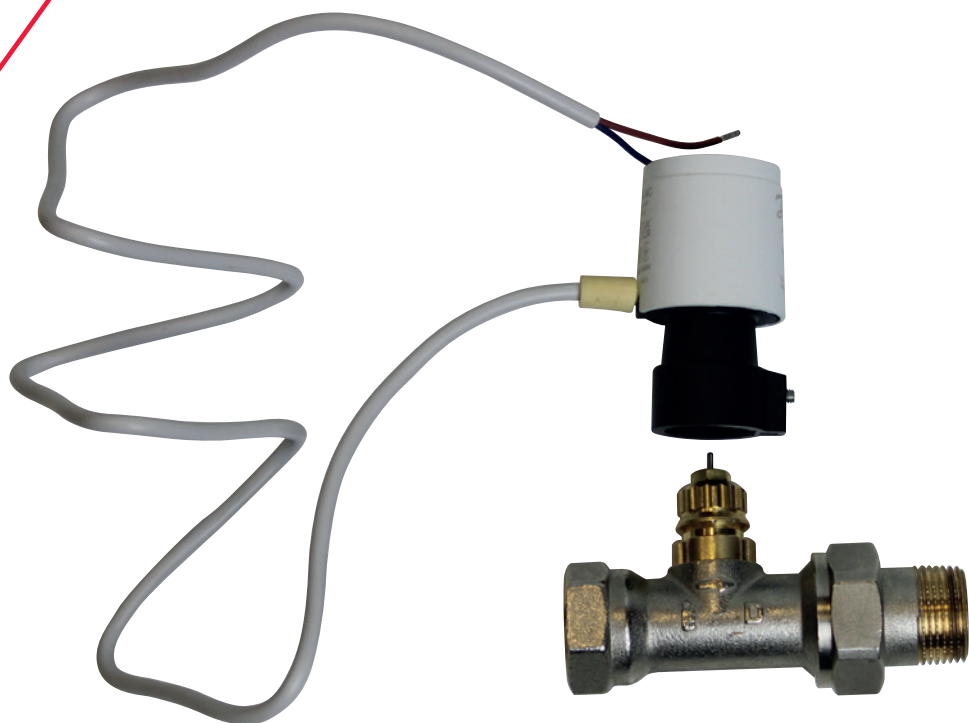

SPC 2-port On/Off Valve

Installation, Operation and Maintenance Instructions

IOM 105 Issue 1



Contents

Page

1		General	3
2		Installation	4
2.1		Valve	4
2.2		Actuator	5
2.3		Wiring	5
3		Operation	5
4		Maintenance	5
5		Fault finding	6
6		Disposal	6

1. General

The 2-port on/off valve is supplied with Fan Convector units designed to close the valve to prevent water flowing through the heat exchanger when the room reaches the setpoint. When the unit is calling for heat, the valve will open allowing water to flow through the heat exchanger.

The 2-port on/off valve is supplied as an optional extra with the Fan Convectors and is supplied loose. The kit consists of a valve and actuator; the valve needs to be screwed into the pipework at the coil heat exchanger connection. The actuator needs to be wired as mentioned in 2.3.

2-port on/off valve:

- M2PV - Modulo 2-port on/off valve plus relay box
- V2PV - Vision 2-port on/off valve for waterside control
- 2PV - 2-port on/off valve for waterside controls



M2PV relay box pre-wired and fitted to the unit


2. Installation

2.1 Valve

The valve assembly consists of a loose $\frac{3}{4}$ " male taper tail with a spherical seat union on the other end.

The tail should be screwed directly into the $\frac{3}{4}$ " female connection on the coil heat exchanger in line with good pipework practice i.e. using tape/hemp and jointing paste. A radiator step wrench (spud wrench) should be used for this.

After fitting the tail the valve should be attached to it by tightening the spherical seat union. The other end of the valve assembly consists of a female $\frac{3}{4}$ " fitting and pipework or fittings, as required, should be made to this.

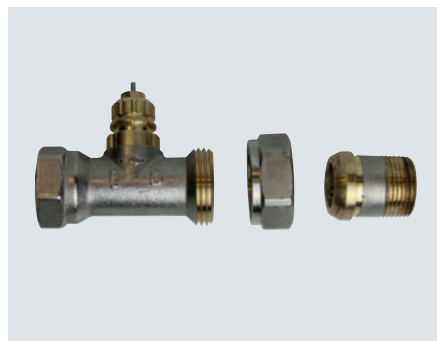

2.2 Actuator

The actuator is a 230V thermal type which acts to close the valve when the surface temperature approaches the limiting temperatures. The actuator/valve is on/off and closing time is approximately 3 minutes with a maximum power draw of 2W.



The actuator clips onto the valve and is held in position by a grub screw. The grub screw is secured using a hex key.



2.3 Wiring

M2PV & V2PV

The actuators are two wire and are supplied with a 1m length of cable. The two cables are pre-wired to the Fan Convactor. See wiring diagram supplied with the unit.

2PV:

The actuators are two wire and supplied loose for the customer to wire as they see fit.

3. Operation

See the Fan Convactor operating manual. Once installed and wired appropriately the 2-port on/off valve will not require any specific user intervention.

4. Maintenance

The 2-port on/off valve is maintenance free, see the Fan Convactor operating manual for general maintenance requirements. Should parts need to be replaced, then they should be removed in the reverse manner to the installation instructions above and replaced as above.

5. Fault finding

See Fan Convector unit manual; faults specific to the 2-port on/off valve are limited to the valve not opening/closing as required. If such an issue is suspected, then check the wiring is all sound and correct in line with the wiring diagram prior to

replacing any parts. The Fan Convector unit must be electrically isolated prior to any work being undertaken on it or the 2-port on/off valve. All electrical work must be by a competent person, suitably qualified.

6. Disposal

Electrical components should be disposed of separately in line with WEEE Directives. They should not be disposed of with domestic waste and should be recycled as far as possible.





S & P Coil Products Limited trading as SPC

Trading Address:

SPC House, Evington Valley Road, Leicester, LE5 5LU

Registered Office:

15 Northgate, Aldridge, Walsall, England, WS9 8QD

T: 0116 249 0044

E: spc@spc-hvac.co.uk

spc-hvac.co.uk

IOM 105 Issue 1 - SPC 2-port On/Off Valve

